

	Work Instruction	Doc. Revision	01
	AXI V810 X-ray tube Manual Warm up Procedure (MFX driver)	Effective Date	12 Jan 2017

This procedure is applicable to below models:

V810 STD	☒	S1	☒	S2
V810 XXL	☒	S1	☒	S2
V810 S2EX	☒			
V810 Mini	☐			

REVISION HISTORY

Rev	Effective Date	Description	Doc Originator
00	22 Feb 2016	First Release	CHIN CHEE YAN
01	12 Jan 2017	Template update & Content update	ONG KEAN SHENG

	Work Instruction	Doc. Revision	01
	AXI V810 X-ray tube Manual Warm up Procedure (MFX driver)	Effective Date	12 Jan 2017

1. Quit V810 GUI.
2. Ensure machine access door is close firmly.
3. Launch the MFX application which locate at desktop.



Figure 1 MFX

4. Ensure the COM 2 is selected (show at the bottom left corner), else, go to Tools → Option → Comm → Select Com 2 → OK. Once done, go to Tools and click connect.

Series 1 machine, select Com 3

Series 2 machine, select Com 2

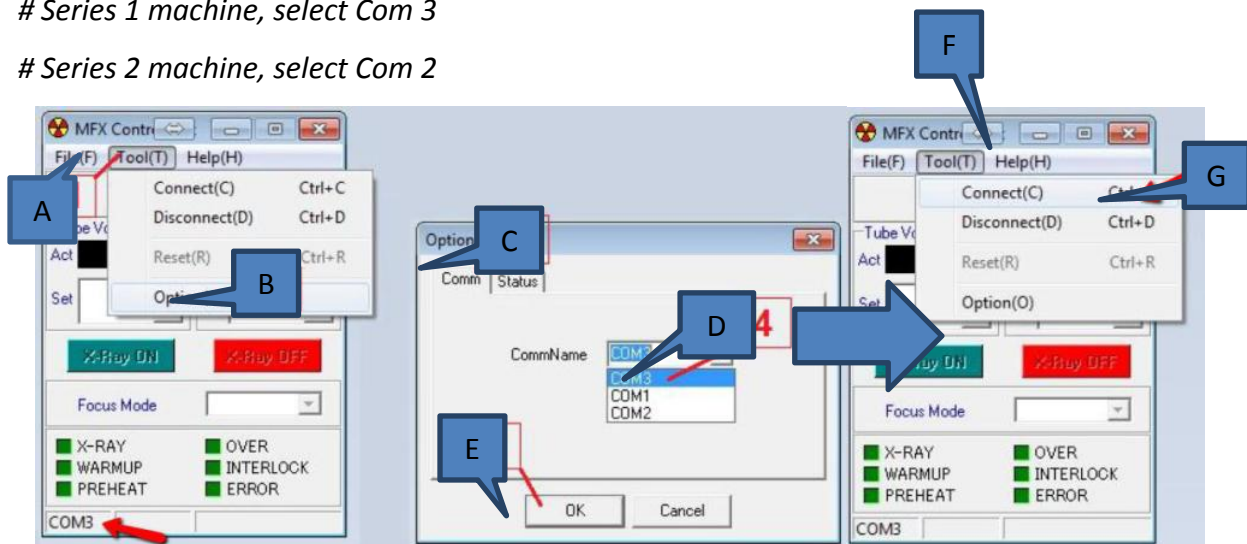


Figure 2 MFX Com Selection

5. Select the "Small" focus mode and ensure the setting was X-ray tube Voltage (80kv) and Current (100uA) as shown in the Figure 3, amend if need. Press X-ray ON and leave it for warm-up for 1 hour.

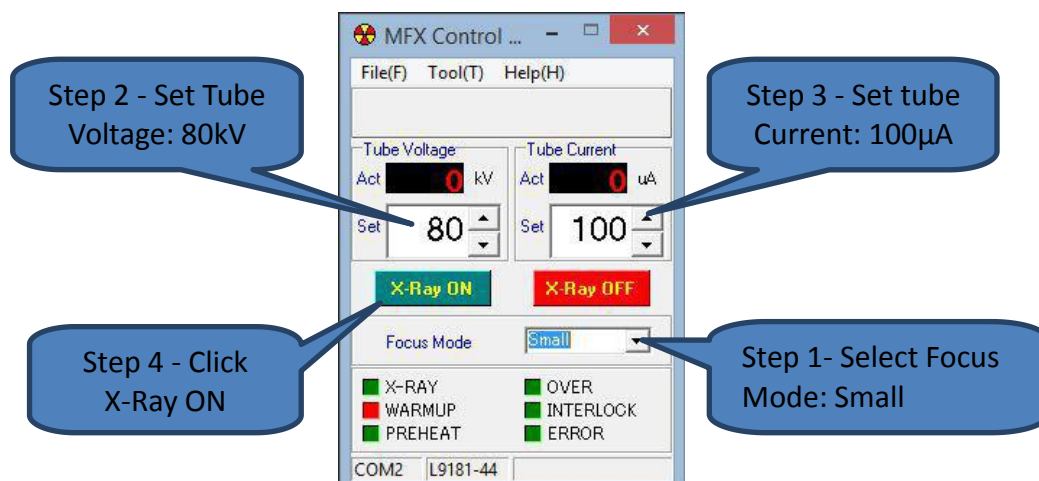


Figure 3 MFX (SMALL RAMP)

ViTrox	Work Instruction	Doc. Revision	01
	AXI V810 X-ray tube Manual Warm up Procedure (MFX driver)	Effective Date	12 Jan 2017

6. Turn off the X-ray, select the “Middle” focus mode and ensure the setting was X-ray tube Voltage (110kv) and Current (146uA) as shown in the Figure 4, amend if need. Press X-ray ON and leave it for warm-up for 1 hour.

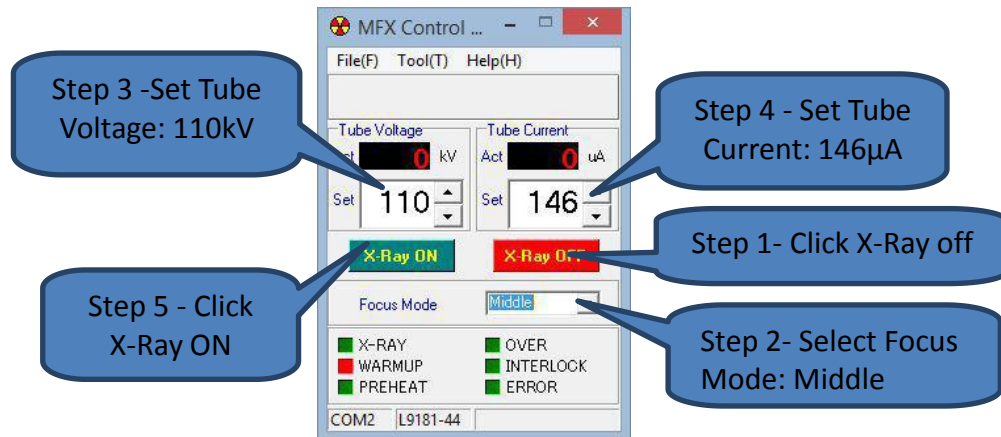


Figure 4 MFX (MEDIUM RAMP)

7. Turn off the X-Ray, select the “Large” focus mode and ensure the setting was X-ray tube Voltage (130kv) and Current (200uA) as shown in the Figure 18. Press X-ray ON and leave it for warm-up for 1 hour.

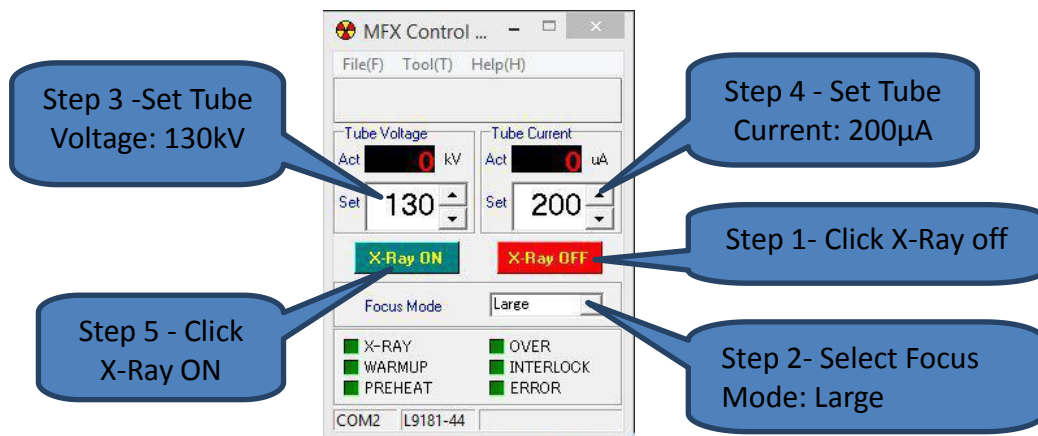


Figure 5 MFX (LARGE RAMP)

8. Once completely run 3 mode tube warm-up, click “X-ray off” and go to “Tools” click “Disconnect”.

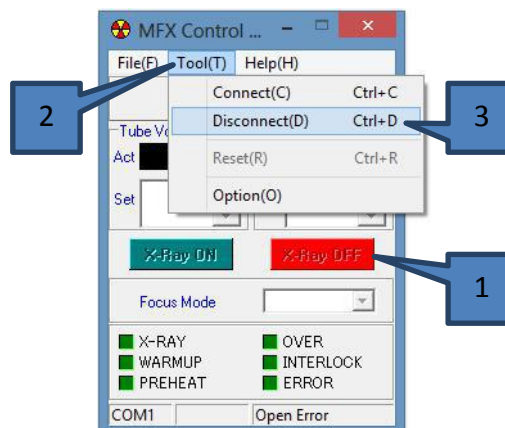


Figure 6 MFX

ViTrox	Work Instruction	Doc. Revision	01
	AXI V810 X-ray tube Manual Warm up Procedure (MFX driver)	Effective Date	12 Jan 2017

9. Open the V810 software

10. Initialize at X ray Source Tab.

Services → Subsystem Status & Control → X-Ray Source → Initialize

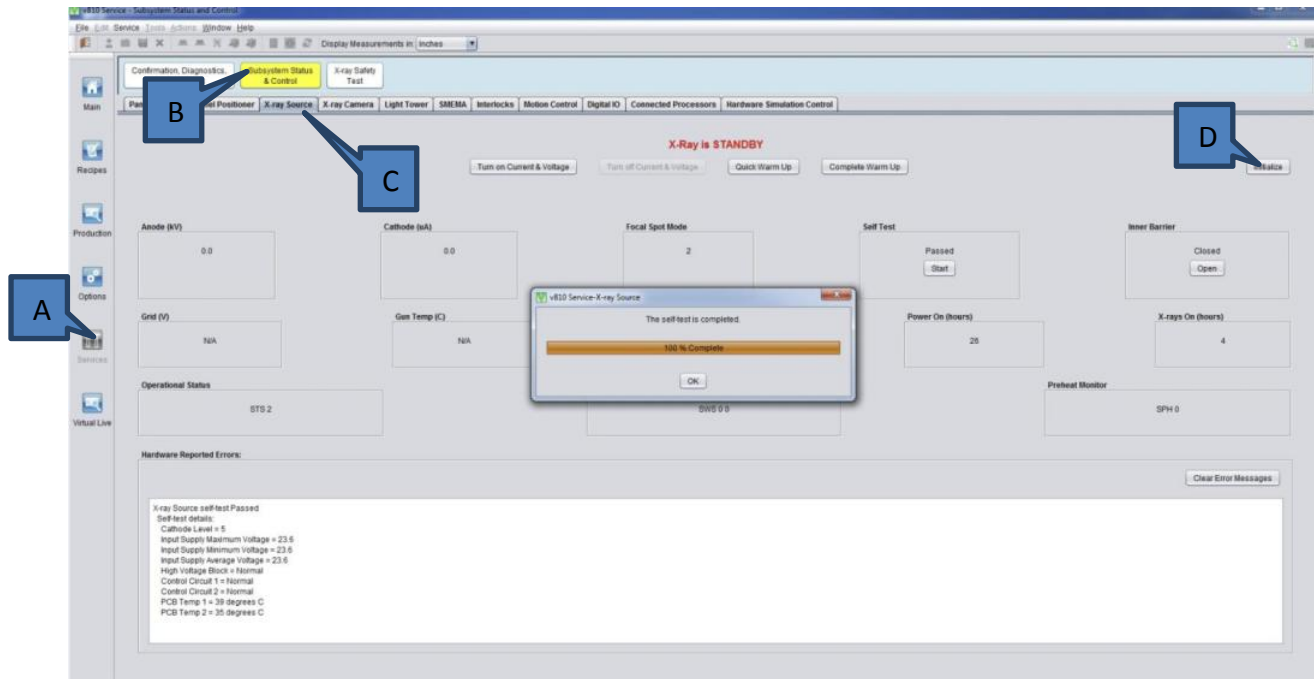


Figure 7 X ray Source